

Operating Manual

Model: 108-3

Size:

Serial #:

Sales Order:

7400 East 42nd
Place Tulsa,
Oklahoma
74145-4744 USA

phone: 918-627-1942
888-628-8258

fax: 918-622-8916

email: sales@controlvalves.com

website: www.controlvalves.com



back pressure control valve

installation, operating and maintenance instructions

model 108-3

GENERAL DESCRIPTION

The OCV Model 108-3 may be generically described as a back pressure control valve, or pressure sustaining valve. It functions to control the incoming pressure at the set point, or more commonly, to prevent the pressure from falling below a predetermined minimum. For example, it may be installed on the discharge of a pump to ensure that the pump remains "on its curve".

The 108-3 also includes a check feature, enabling it to close tightly in the event of pressure reversal to prevent backflow.


The Model 108-3 consists of the following components, arranged as shown on the schematic diagram:

1. **Model 65 Basic Control Valve**, a hydraulically-operated, diaphragm-actuated, globe or angle valve which closes with an elastomer-on-metal seal.
2. **Model 1330 Pressure Relief Pilot**, a two-way, normally-closed pilot valve which senses upstream pressure under its diaphragm and balances it against an adjustable spring load. An increase in upstream pressure tends to make the pilot open.
3. **Model 126 Ejector**, a simple "tee" fitting with a fixed orifice in its inlet port. It provides the proper pressure to the diaphragm chamber of the main valve depending on the position of the pressure relief pilot.
4. **Model 141-3 Flow Control Valve**, a needle-type

valve that provides adjustable, restricted flow in one direction, and free flow in the opposite direction. On the 108-3, the flow control valve is connected as a **closing speed control**.

5. **Two Model 141-1 Check Valves**, which enable the 108-3 to function as a check valve.
6. **Model 123 Inline Strainer**, which protects the pilot system from solid contaminants in the line fluid.
7. **Model 155L Visual Indicator Assembly**, which enables the user to determine the valve's operating position at a glance.

BACK PRESSURE CONTROL ACTION: To understand how the 108-3 operates, it is best to start with the **Ejector (4)**. Due to the orifice in its upstream port, the

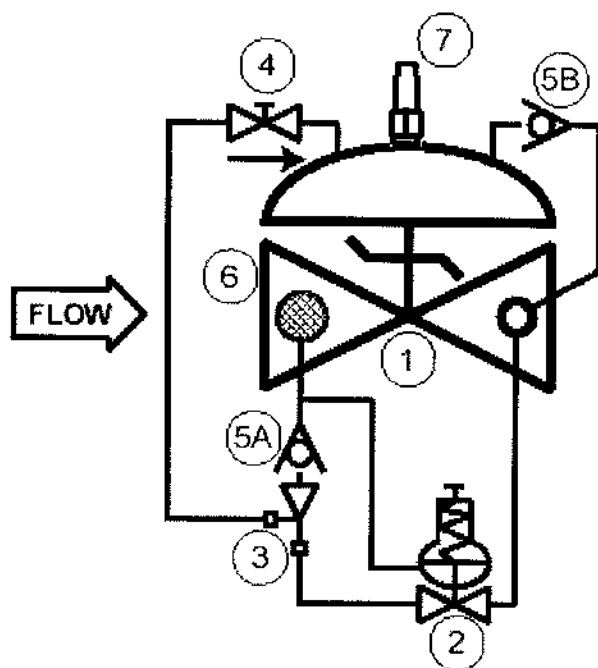

ejector creates a pressure drop proportional to the flow through it. The flow through the ejector is in turn controlled by the degree of opening of the **Pressure Relief Pilot (2)**. The **wider** the pilot **opens**, the **greater the flow** through the ejector and the **lower the pressure** downstream of the orifice. Conversely, the **more** the pilot **closes**, the **lower the flow** through the ejector and the **greater the pressure** downstream of the orifice.

Now note that the diaphragm chamber of the **Main Valve (1)** is connected to the branch port of the ejector and is thus downstream of the orifice. Therefore, the pressure in the diaphragm chamber of the main valve is effectively controlled by the pressure relief pilot, in the manner described above. As the pilot **opens**, the diaphragm pressure **decreases** and the main valve **opens**; as the pilot **closes**, the diaphragm pressure **increases** and the main valve **closes**.

If the 108-3 is installed as a **pressure sustaining valve**, the pressure upstream of the main valve is normally above the set point of the relief pilot. Therefore, the pilot is wide open as is the main valve. However, if system demand increases to the point that the upstream pressure tries to fall below the set point, the pilot will start to close and the main valve will follow, throttling as required to keep the pressure from falling any further.

CHECK FEATURE: In the event downstream pressure becomes higher than upstream pressure, **check valve (6B)** opens to direct the downstream pressure to the diaphragm chamber, forcing the main valve fully and tightly closed. At the same time, **check valve (6A)** closes to prevent ant backflow through the pilot system. Notice that this action will occur regardless of the position of the solenoid pilot or relief pilot.

INSTALLATION

The 108-3 is furnished fully factory-assembled and ready for installation at the appropriate point in the system. For full installation details, the user is referred to the Model 65 Basic Valve section of this manual.

STARTUP AND ADJUSTMENTS

The following procedures should be followed in the order presented in order to affect an initial startup of the 108-3.

1. Install a pressure gauge of the proper range upstream of the 108-3. The unused **inlet** side port in

the main valve body may be used for this purpose if there is no convenient location in the upstream piping.

2. Remove the plastic cap from the pressure relief pilot (2) and loosen the adjusting screw jam nut. Turn the adjusting screw **counterclockwise** until it is loose enough to be turned with the fingers.
3. Loosen the adjusting screw jam nut on flow control valve (4) (closing speed control). Turn the adjusting screw **clockwise** to a full stop, then **counterclockwise** three full turns.
4. Start the pump or otherwise start the system flowing. The main valve at this time should be fully closed.
5. Carefully loosen a pipe plug in the main valve bonnet until fluid begins to discharge around the threads. When only clear fluid (no air) is discharging, retighten the plug.
6. Observing the inlet pressure gauge, open valves or otherwise increase flow until the pressure falls to a point approximately 5 psi **below** the desired set point.
7. Slowly turn the adjusting screw of the pressure relief pilot (2) **clockwise** until the pressure rises to **the set point**. Tighten the adjusting screw jam nut and replace the plastic cap.
8. Shut down the pump.

MAINTENANCE


Because of the simplicity of design of the 108-3, required maintenance is minimal. However, the following checks, periodically performed, can do much to keep the valve operating properly and efficiently.

1. Check for leaks at fittings and around flanges and connections. Tighten as required.
2. Check that electrical wiring and connections are secure.

TROUBLESHOOTING

In the event of malfunction of the 108-3, the following guide should enable the technician to isolate the specific cause of the problem and take the appropriate corrective action.

MAIN VALVE FAILS TO OPEN

1. Valve closed upstream or downstream of the 108-3 — Open as required.
 2. Pressure relief pilot (2) adjusted too far clockwise — See Adjustment instructions.
 3. Diaphragm of pressure relief pilot (2) ruptured. This will be evidenced by a discharge of fluid from the vent hole in the pilot bonnet — Replace diaphragm. See the 1330 Pilot section of this manual.
 4. Stem of pressure relief pilot (2) binding — Disassemble pilot and determine cause. See the 1330 Pilot section of this manual.
 5. Stem of main valve binding — Disassemble valve and determine cause. See the Model 65 Basic Valve section of this manual.
- 

3. Damaged seat in main valve. — Disassemble valve and determine cause. See the Model 65 Basic Valve section of this manual.

MAIN VALVE FAILS TO CLOSE

1. Closing speed control (4) adjusted fully closed — Open as required. See Adjustment instructions.
2. Pressure relief pilot (2) adjusted too far counter-clockwise — See Adjustment instructions.
3. Pressure relief pilot (2) stem binding or seat badly deteriorated — Disassemble pilot and determine cause. See the 1330 Pilot section of this manual.
4. Check valve (5B) leaking — Disassemble check valve and determine cause. Repair or replace as necessary.
5. Check valve (5A) stuck closed — Disassemble check valve and determine cause. Repair or replace as necessary.
6. Strainer (6) clogged — Clean as required.
9. Main valve stem binding, diaphragm ruptured, or object caught in valve — Disassemble valve and determine cause. See the Model 65 Basic Valve section of this manual.

MAIN VALVE LEAKS WHEN CLOSED

1. Pressure relief pilot (2) adjusted slightly too low — See Adjustment Instructions.
2. Damaged seat in relief pilot (2) — Disassemble pilot and determine cause. See the 1330 pilot section of this manual.



Model 65/765

basic control valve

GENERAL DESCRIPTION

The OCV Series 65 is a hydraulically operated, diaphragm-actuated valve, *full port* valve. The globe configuration (Model 65) is available in sizes 1 1/4" thru 16" and 24". The angle configuration (Model 65A) is available in sizes 1 1/4" thru 12" and 16".

The Series 765 is the same as the Series 65, except that it is a *reduced port* valve. It is available only in the globe configuration in sizes 3" thru 24".

The diaphragm is nylon-fabric bonded with synthetic rubber and forms a sealed chamber in the upper portion of the valve, separating operating pressure from line pressure. A synthetic rubber seat disc forms a tight seal with the valve seat when pressure is applied above the diaphragm.

FUNCTIONAL DESCRIPTION

Because the Series 65/765 is a hydraulically operated valve, it requires a minimum line pressure of approximately 5 psig in order to function. The valve functions on a simple principle of pressure differential. The line pressure at the inlet of the valve is bypassed through the pilot control piping to the diaphragm chamber of the valve. This pressure, together with the valve spring, works against the pressure under the valve seat. Because the effective area of the diaphragm is greater than that of the seat, the valve is held tightly closed. As the controlling pilot(s) allow the pressure to bleed off the diaphragm chamber, the two opposing pressures begin to balance and the valve will begin to open. The valve can be used to perform a simple on-off function, or with the proper pilot system, a modulating, or regulating function.

In cases where the line fluid is unusually dirty, or is otherwise unsuitable for operating the valve, an independent operating pressure source may be employed. The pressure available from such a source must be equal to, or greater than, line pressure.

INSTALLATION

In order to insure safe, accurate and efficient operation of the OCV control valve, the following list of checkpoints and procedures should be followed when installing the valve.

1. Make a careful visual inspection of the valve to insure that there has been no damage to the external piping, fittings or controls. Check that all fittings are tight.
2. Thoroughly flush all interconnecting piping of chips, scale and foreign matter prior to mounting the valve.

CAUTION: Take appropriate care to protect personnel and equipment when lifting the valve for uncrating and for installation. Use appropriate lifting equipment. Lifting eyes are provided on 8" and larger valves to facilitate this task.

3. Install the valve in the line according to the flow arrow on the inlet flange. The arrow should point downstream.
4. When installing flanged-end valves, use the proper number and size of flange bolts when installing the valve (see Tables 1 & 2). Make sure flange gaskets are of the proper material for the service. To ensure a tight seal, flange bolts should be tightened evenly in a criss-cross pattern. Tables 1 & 2 also shows the proper final torque values for the flange bolts.



5. Allow sufficient room around the valve for ease of adjustment and maintenance service.
6. After the lines are filled with liquid, bleed all air from the diaphragm chamber. This can be done by carefully loosening a pipe plug in the bonnet until fluid begins to appear around the threads. When only clear liquid (no air) is flowing, retighten the plug.

In addition, it is highly recommended that:

1. Isolation valves (e.g., gate or butterfly) be installed on the inlet and discharge sides of the valve to facilitate isolating the valve for maintenance.
2. Pressure gauges be installed at the inlet and outlet sides of the valve to provide monitoring of the valve during initial start-up and during operation. The body side ports, if unused by the pilot system, provide a convenient connection for the gauges.
3. All valves larger than 6" be installed horizontally, i.e., with the bonnet pointed up, for ease of adjustment and maintenance servicing.

MAINTENANCE

The OCV control valve requires no lubrication and a minimum of maintenance. However, a periodic inspection should be established to determine how the fluid being handled is affecting the efficiency of the valve. In a water system, for example, the fluid velocity as well as the substances occurring in natural waters, such as dissolved minerals and suspended particles, vary in every installation. The effect of these actions or substances must be determined by inspection. It is recommended that an annual inspection, which includes examination of the valve interior, be conducted. Particular attention should be paid to the rubber parts, i.e., the diaphragm and seat disc. Any obviously worn parts should be replaced.

REPAIR PROCEDURES

In the event of malfunction of the OCV control valve, troubleshooting should be conducted according to the procedures outlined for the specific model of valve. Then, if those steps indicate a problem with the main valve, this section will outline the procedures necessary to correct the problem.

Problems with the main valve can be classed in three basic categories:

1. VALVE FAILS TO OPEN

- a. Diaphragm damaged* - See Procedure A
- b. Stem binding - See Procedure B


2. VALVE FAILS TO CLOSE

- a. Diaphragm damaged* - See Procedure A
- b. Stem binding - See Procedure B
- c. Object lodged in valve - See Procedure B


3. VALVE OPENS AND CLOSSES BUT LEAKS WHEN CLOSED

- a. Seat disc damaged - See Procedure C
- b. Seat ring damaged - See Procedure D

**A diaphragm failure can prevent the valve from either opening or closing, depending on the flow direction. Most water service valves flow "under the seat", in which case a diaphragm failure will keep the valve from closing. On the other hand, most fuel service valves flow "over the seat", in which case a diaphragm failure will keep the valve from opening. To determine which you have, examine the bridge mark cast into the side of the valve body, and then compare it with the figures below.*

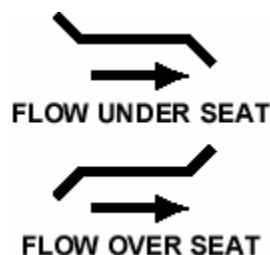

IMPORTANT: Over the years, OCV has made significant design changes to the 3", 4", 8", 10" and 12" valves. Therefore, before ordering rubber kits or other parts, you will need to determine which style valve you have (old or new). This can be easily determined by looking at the valve *bonnet*. As shown below, old-style valves have flat bonnets; new-style valves (except for the 3" full port and 4" reduced port valves) have domed bonnets.

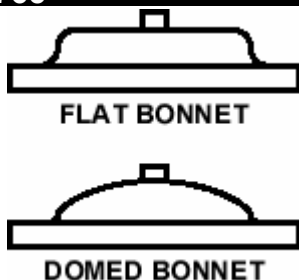

For 3" valves, simply measure the *diameter* of the bonnet. Old-style bonnets have a 7-11/16" (195 mm) diameter; new style bonnets have an 8-3/4" (222 mm) diameter. That same 8-3/4" diameter flat bonnet is also used on the 4" reduced port valve.

PROCEDURE A: DIAPHRAGM REPLACEMENT

1. Wear appropriate clothing and equipment to protect the skin and eyes from exposure to the line fluid.
2. Isolate the valve from the system by closing upstream and downstream block valves.
3. Bleed all pressure from the valve.

WARNING! IT IS EXTREMELY IMPORTANT THAT ALL PRESSURE BE REMOVED FROM THE VALVE BEFORE DOING EVEN PARTIAL DISASSEMBLY.

4. Loosen one of the tubing connections on the bonnet. Allow any residual pressure to bleed off.
5. To minimize any possible fluid spillage, drain the upstream and downstream sides of the valve as much as possible. Unused side ports in the main valve body can be used for this purpose. They will bring the fluid level down to approximately the centerline of the piping.
6. Remove all tubing connected at the bonnet.
7. Remove the bonnet nuts.
8. Remove the bonnet. If the bonnet sticks in place, it may be loosened by rapping sharply around its edge with a rubber-headed mallet. NOTE: 8" and larger valves are equipped with eye bolts through which a chain can be fastened to aid in lifting the bonnet.
9. Remove the spring.
10. Remove the diaphragm plate capscrews and the diaphragm plate.
11. Remove the old diaphragm.

12. Making sure the dowel pin holes are in the proper location, place the new diaphragm over the studs and press down until it is flat against the body and spool.
13. Replace the diaphragm plate and the diaphragm plate capscrews.
14. Tighten all diaphragm plate capscrews snugly. See Table 4 for proper torque values.
15. Replace the spring.
16. Replace the bonnet and reinstall the bonnet nuts.
17. Tighten the bonnet nuts snugly using a criss-cross tightening pattern. See Table 3 for torque requirements.
18. Reinstall the control tubing.
19. Reopen the upstream and downstream block valves.
20. Before placing the valve back in service, perform the air bleed procedure described in the Installation section of this manual.

PROCEDURE B: CORRECTION OF BINDING STEM

1. Perform Steps 1 thru 9 of Procedure A, above.
2. Remove the spool assembly from the valve. NOTE: On smaller valves, this can be accomplished simply by grasping the stem and pulling upward. Valves 6" and larger have the top of the stem threaded to accept an eyebolt to aid in lifting the spool out of the body. 6" thru 12" valves are threaded 3/8-16. 14" and 16" valves are threaded 5/8-11. The 24" valve is threaded 3/4-10.
3. Carefully examine both ends of the stem for deep scratches, scoring or buildup of mineral deposits. Polish the stem if necessary using a fine grade of emery cloth.
4. Similarly, examine and polish the upper bushing (in the bonnet) and the lower guide (in the seat ring).
5. Reinstall the spool assembly.
6. Reassemble the valve, following Steps 15 thru 20 in Procedure A.

PROCEDURE C: SEAT DISC REPLACEMENT

1. Perform Steps 1 and 2 of Procedure B, above.
2. With the spool assembly removed from the body, remove the seat retainer screws.

3. Slide the seat retainer off the lower end of the stem.
4. Remove the seat disc from its groove in the spool.
NOTE: The seat disc may fit quite tightly in the groove. If necessary, it may be pried out using a thin-bladed screwdriver or similar tool.
5. Install the new seat disc in the groove.
6. Reinstall the seat retainer and tighten the seat retainer screws.
7. Reassemble the valve, following Steps 5 and 6 of Procedure B.
14. Install the new seat ring in the body, making sure that the capscrew holes line up.
15. Replace and tighten all the capscrews.
16. Reassemble the valve, following Steps 5 and 6 of Procedure B.



PROCEDURE D: SEAT RING REPLACEMENT

NOTE: It is rare for a seat ring to require replacement. Minor nicks and scratches in the seating surface can usually be smoothed out with emery cloth.

1. Perform Steps 1 and 2 of Procedure B, above.
2. If you are working on a 3" or smaller valve, or a 4" old-style valve, follow Steps 4 thru 9, below.
3. If you are working on a new-style 4" valve, or any valve 6" or larger, follow Steps 10 thru 16, below.
4. Seat rings in the smaller valves are threaded into the valve body. To remove, you will need a special seat ring tool. One may be purchased from OCV, or one may be fabricated. (See Table 5 for details.)
5. Using the seat ring tool, unthread the seat ring from the body.
6. Remove the old o-ring from the counterbore in the body.
7. Install the new o-ring in the counterbore.
8. Using the seat ring tool, install the new seat ring.
9. Reassemble the valve, following Steps 5 & 6 of Procedure B.
10. Seat rings on larger valves are bolted into the body with socket head capscrews. In addition you will note that the seat ring is equipped with additional threaded holes that may be used for "jacking" the seat ring out of the body.
11. Remove the socket head capscrews.
12. Remove the old seat ring from the body by temporarily installing two or more of the capscrews in the "jacking" holes.
13. Install a new o-ring in the groove of the new seat ring. Lubricate the o-ring and outer seat ring wall with Vaseline® or similar lubricant.



TABLE 1
FLANGE BOLTING REQUIREMENTS – CLASS 150 FLANGES

VALVE SIZE (DN)	NO. OF BOLTS	BOLT SIZE	RECOMMENDED TORQUE (FT-LB)	RECOMMENDED TORQUE (N-M)
1 ¼" (32)	4	1/2-13 X 2.50" LONG	75	102
1 ½" (40)	4	1/2-13 X 2.50" LONG	75	102
2" (50)	4	1/2-13 X 2.50" LONG	75	102
2 ½" (65)	4	5/8-11 X 3.00" LONG	150	204
3" (80)	4	5/8-11 X 3.25" LONG	150	204
4" (100)	8	5/8-11 X 3.25" LONG	150	204
6" (150)	8	3/4-10 X 3.50" LONG	250	339
8" (200)	8	3/4-10 X 3.75" LONG	250	339
10" (250)	12	7/8-9 X 4.00" LONG	378	513
12" (300)	12	7/8-9 X 4.25" LONG	378	513
14" (350)	12	1-8 X 4.50" LONG	583	791
16" (400)	16	1-8 X 4.75" LONG	583	791
18" (450)	16	1 1/8" X 5.00" LONG	782	1061
20" (500)	20	1 1/8" X 5.50" LONG	782	1061
24" (600)	20	1 1/4"-7 X 6.00" LONG	1097	1488

TABLE 2
FLANGE BOLTING REQUIREMENTS – CLASS 300 FLANGES

VALVE SIZE (DN)	NO. OF BOLTS	BOLT SIZE	RECOMMENDED TORQUE (FT-LB)	RECOMMENDED TORQUE (N-M)
1 ¼" (32)	4	5/8-11 X 2.75" LONG	150	204
1 ½" (40)	4	3/4-10 X 3.00" LONG	250	339
2" (50)*	6	5/8-11 X 3.00" LONG	150	204
	2	5/8-11 X 2.25" LONG	150	204
2 ½" (65)	8	3/4-10 X 3.25" LONG	250	339
3" (80)	8	3/4-10 X 3.50" LONG	250	339
4" (100)	8	3/4-10 X 3.75" LONG	250	339
6" (150)	12	3/4-10 X 4.25" LONG	250	339
8" (200)	12	7/8-9 X 4.75" LONG	378	513
10" (250)	16	1-8 X 5.50" LONG	583	791
12" (300)	16	1 1/8-7 X 5.75" LONG	782	1061
14" (350)	20	1 1/8-7 X 6.25" LONG	782	1061
16" (400)*	18	1 1/4-7 X 6.50" LONG	1097	1488
	2	1 1/4-7 X 5.50" LONG	1097	1488
18" (450)	24	1 1/4-7 X 6.75" LONG	1097	1488
20" (500)	24	1 1/4-7 X 7.25" LONG	1097	1488
24" (600)	24	1 1/2-6 X 8.00" LONG	1750	2375

* TOP TWO HOLES ON VALVE FLANGES ARE DRILLED & TAPPED. USE THE SHORTER BOLTS LISTED IN THESE HOLES.



TABLE 3
BONNET BOLTING TORQUE SPECIFICATIONS
NEW-STYLE FULL PORT VALVES (SERIES 65)

VALVE SIZE (DN)	NO. OF STUDS	STUD SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
1 ¼" (32)	8	3/8-16	31 (42)	8" (200)	12	7/8-9	378 (513)
1 ½" (40)	8	3/8-16	31 (42)	10" (250)	16	7/8-9	378 (513)
2" (50)	8	3/8-16	31 (42)	12" (300)	20	1 1/8-7	782 (1061)
2 ½" (65)	8	1/2-13	75 (102)	14" (350)	20	1 1/8-7	782 (1061)
3" (80)	8	1/2-13	75 (102)	16" (400)	20	1 1/4-7	1097 (1488)
4" (100)	8	3/4-10	250 (339)	24" (400)	28	1 1/2-6	1750 (2375)
6" (150)	12	3/4-10	250 (339)				

NEW-STYLE REDUCED PORT VALVES (SERIES 765)

VALVE SIZE (DN)	NO. OF STUDS	STUD SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
3" (80)	8	3/8-16	31 (42)	12" (300)	16	7/8-9	378 (513)
4" (100)	8	1/2-13	75 (102)	16" (250)	20	1 1/8-7	782 (1061)
6" (150)	8	3/4-10	250 (339)	18" (300)	20	1 1/4-7	1097 (1488)
8" (200)	12	3/4-10	250 (339)	20" (350)	20	1 1/4-7	1097 (1488)
10" (250)	12	7/8-9	378 (513)	24" (400)	20	1 1/4-7	1097 (1488)

OLD-STYLE FULL PORT VALVES (SERIES 65)

VALVE SIZE (DN)	NO. OF SCREWS	STUD SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
3" (80)	8	3/8-16	31 (42)	10" (250)	16	3/4-10	250 (339)
4" (100)	8	7/16-20	50 (68)	12" (300)	20	1 1/8-7	782 (1061)
8" (200)	12	3/4-10	250 (339)				



TABLE 4
DIAPHRAGM PLATE CAPSCREW TORQUE SPECIFICATIONS
NEW-STYLE FULL PORT VALVES (SERIES 65)

VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
1 1/4" (32)	1	3/8-24 N	21.5 (29)	8" (200)	8	1/2-13 H	43 (58)
1 1/2" (40)	1	3/8-24 N	21.5 (29)	10" (250)	12	1/2-13 H	43 (58)
2" (50)	4	1/4-20 A	6.3 (8.6)	12" (300)	12	1/2-13 H	43 (58)
2 1/2" (65)	6	10-32 A	2.7 (3.7)	14" (350)	16	3/8-16 H	19.7 (27)
3" (80)	6	1/4-20 A	6.3 (8.6)	16" (400)	16	1/2-13 H	43 (58)
4" (100)	6	3/8-16 H	19.7 (27)	24" (400)	16	1-8 H	286 (383)
6" (150)	8	3/8-16 H	19.7 (27)				

NEW-STYLE REDUCED PORT VALVES (SERIES 765)

VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
3" (80)	4	1/4-20 A	6.3 (8.6)	12" (300)	12	1/2-13 H	43 (58)
4" (100)	6	1/4-20 A	6.3 (8.6)	16" (250)	12	1/2-13 H	43 (58)
6" (150)	6	3/8-16 H	19.7 (27)	18" (300)	12	1/2-13 H	43 (58)
8" (200)	8	3/8-16 H	19.7 (27)	20" (350)	12	1/2-13 H	43 (58)
10" (250)	8	1/2-13 H	43 (58)	24" (400)	12	1/2-13 H	43 (58)

OLD-STYLE FULL PORT VALVES (SERIES 65)


VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)	VALVE SIZE (DN)	NO. OF SCREWS	SCREW SIZE	REC. TORQUE FT-LB (N-M)
3" (80)	4	1/4-20 H	6.3 (8.6)	10" (250)	12	3/8-16 H	19.7 (27)
4" (100)	6	1/4-20 H	6.3 (8.6)	12" (300)	12	1/2-13 H	43 (58)
8" (200)	8	3/8-16 H	19.7 (27)				

N = SINGLE HEX NUT ON VALVE STEM



A = ALLEN-HEAD CAPSCREWS

H = HEX-HEAD CAPSCREWS

TABLE 5
SEAT RING TOOL DETAILS

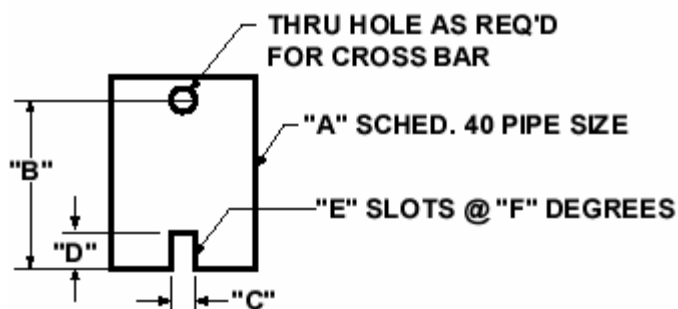


VALVE SIZE FULL PORT	VALVE SIZE RED. PORT	"A" PIPE SIZE	"B" MIN. LENGTH	"C" SLOT WIDTH	"D" SLOT DEPTH	"E" # SLOTS	"F" SPACING
1 1/4"	--	3/4	6"	3/8"	3/8"	2	180°
1 1/2"	--	3/4	6"	3/8"	3/8"	2	180°
2"	3"	1 1/2	7"	3/8"	3/8"	2	180°
2 1/2"	--	2	8"	1/2"	1/2"	3	120°
3" NEW	4"	2 1/2	9"	1/4"	3/8"	3	120°
3" OLD	--	2 1/2	9"	5/8"	5/8"	2	180°
4" OLD	--	3	10"	5/8"	5/8"	2	180°

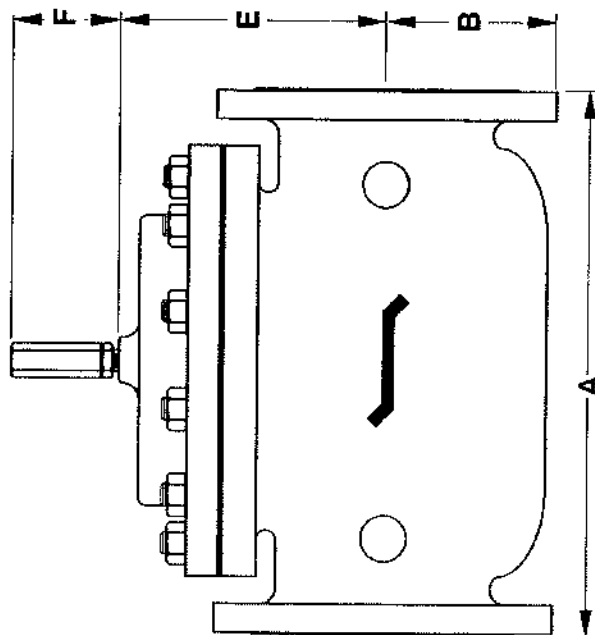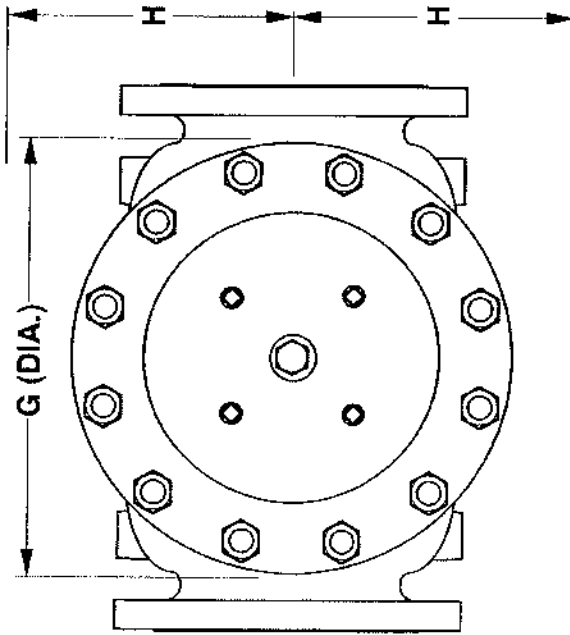

DIM	ANSI CLASS	VALVE SIZE												
		1 1/4	1 1/2	2	2 1/2	3	4	6	8	10	12	14	16	24
A	SE	8.75	8.75	9.88	10.50	13.00	-	-	-	-	-	-	-	-
	150	8.50	8.50	9.38	10.50	12.00	15.00	17.75	25.38	29.75	34.00	39.00	40.38	62.00
	300	8.75	8.75	9.88	11.12	12.75	15.62	18.62	26.38	31.12	35.50	40.50	42.00	63.75
B	SE	1.44	1.44	1.69	1.88	2.25	-	-	-	-	-	-	-	-
	150	2.31	2.50	3.00	3.50	3.75	4.50	5.50	6.75	8.00	9.50	10.62	11.75	16.00
C	300	2.62	3.06	3.25	3.75	4.12	5.00	6.25	7.50	8.75	10.25	11.50	12.75	18.00
	SE	4.38	4.38	4.75	6.00	6.50	-	-	-	-	-	-	-	-
	150	4.25	4.25	4.75	6.00	6.00	7.50	10.00	12.69	14.88	17.00	-	20.81	-
D	300	4.3/8	4.38	5.00	6.38	6.38	7.81	10.50	13.19	15.56	17.75	-	21.62	-
	SE	3.12	3.12	3.88	4.00	4.50	-	-	-	-	-	-	-	-
E	150	3.00	3.00	3.88	4.00	4.00	5.50	6.00	8.00	11.38	11.00	-	15.69	-
	300	3.25	3.25	4.12	4.38	4.38	5.81	6.50	8.50	12.06	11.75	-	16.50	-
F	ALL	6.00	6.00	6.00	7.00	6.50	7.92	10.00	11.88	15.38	17.00	18.00	19.00	27.00
G	ALL	3.88	3.88	3.88	3.88	3.88	3.88	3.88	6.38	6.38	6.38	6.38	6.38	8.00
H	ALL	6.00	6.00	6.75	7.69	8.75	11.75	14.00	21.00	24.50	28.00	31.25	34.50	52.00
	ALL	10.00	10.00	11.00	11.00	11.00	12.00	13.00	14.00	17.00	18.00	20.00	20.00	28.50

NOTE: 3" VALVE DIMENSIONS
ARE FOR NEW MODEL 3100

4" VALVE DIMENSIONS ARE FOR
NEW MODEL 4400

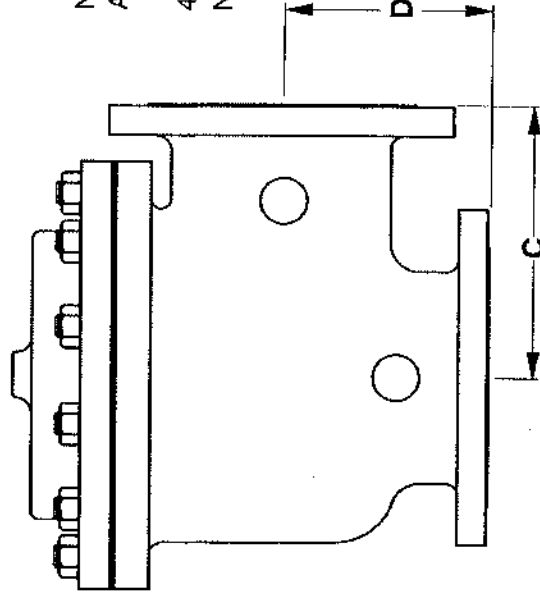

TOLERANCES
UNLESS NOTED
FRACTIONAL $\pm 1/64$
DECIMAL $\pm .005$
MACH. FINISH $125/\sqrt{}$
ANGULAR $\pm 1/2^\circ$

DRAWN BY DATE
SDJ 10-6-97
CHKD. BY DATE

OCV Control Valves
TULSA, OKLAHOMA U.S.A.


GENERAL VALVE DIMENSIONS

SIZE A
DRAWING NUMBER 65D
REV. B

REV. A SDJ 6-6-02
REV. B SDJ 2-3-03

SPRING CHART			
651701	5-30 PSI	GREEN	
651703	20-80 PSI	RED	
651704	65-180 PSI	YELLOW	
651702	100-300 PSI	BLUE	


▲ = RECOMMENDED SPARE PARTS
(INCLUDED IN REPAIR KITS)
BUNA-N KIT PN 930000
VITON KIT PN 930100
EPDM KIT PN 930400

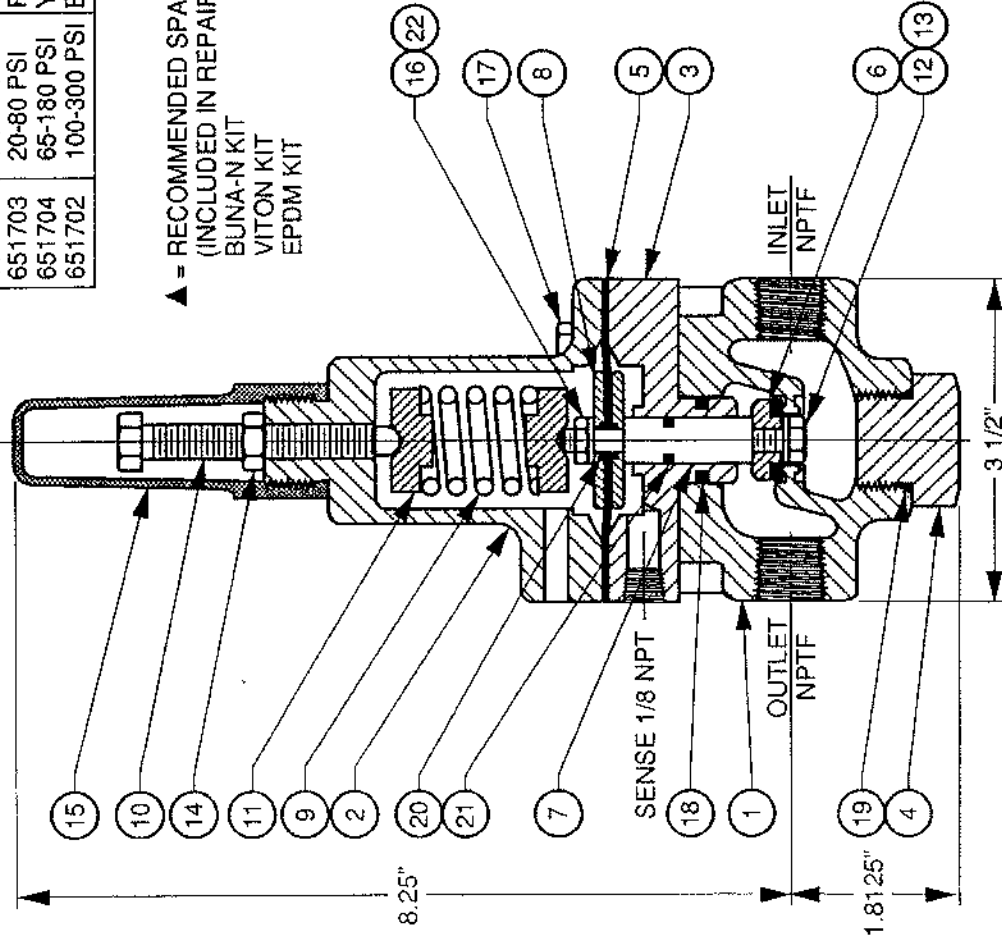

ITEM	PART NO	QTY	DESCRIPTION	MATERIAL
1	302102	1	BODY	BRONZE
	302104			
	302702			
	302704			
2	304102	1	BONNET	BRONZE
	304702			
3	300129	1	ADAPTOR	BRONZE
	300719			
4	692502	1	PLUG	ZINC PLTD STL
	310730			
	694002			
5	694102	1	DIAPHRAGM	BUNA-N / NYLON
	694016			
	310703			
6	310709	1	SEAT DISC	VITON / SS
	310707			
	314702			
7	314002	1	STEM	MONEL
	308102			
8	308702	2	DIAPHRAGM PLATE	BRASS
	CHART			
9	300700	1	SPRING	STN STEEL
	300134			
10	300729	2	ADJUSTING SCREW	STN STEEL
	300729			
11	531700	1	HEX HEAD CAPSCREW	STN STEEL
	685760			
12	590717	1	LOCKWASHER	STN STEEL
	590712			
13	692002	1	HEX NUT	PVC
	590712			
14	531701	4	HEX HEAD CAPSCREW	STN STEEL
	611116			
15	614116	1	O-RING	VITON
	610912			
16	611912	1	O-RING	EPDM
	914912			
17	611010	2	O-RING	VITON
	614010			
18	611012	1	O-RING	VITON
	614012			
19	685700	1	LOCKWASHER	STN STEEL
	685700			

MATERIAL		TOLERANCES	
NOTED		UNLESS NOTED FRACTIONAL $\pm 1/64$ DECIMAL $\pm .005$ MACH. FINISH 125° ANGULAR $\pm 1/2^\circ$	
NO. REQ'D		DRAWN BY	DATE
SCALE 1/2		RON	2-14-96
CHKD. BY		DATE	
REF DWG NO'S		REVISIONS	
CHG	E.C. NO.	DATE	BY

Control Valves TULSA, OKLAHOMA U.S.A.			
MODEL 1330 PILOT 3/8"-1/2" NPTF PRESSURE RELIEF / SUSTAINING / SURGE			
SIZE	DRAWING NUMBER	REV.	
A	1330		

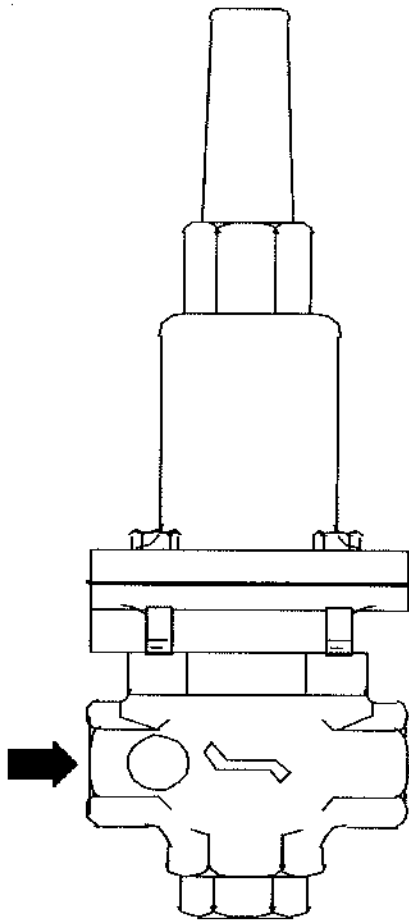

**installation, operating,
and
maintenance instructions**

**pressure sustaining/
pressure relief pilot**

model 1330

GENERAL DESCRIPTION

The Model 1330 Pressure Sustaining/Pressure Relief Pilot is a normally-closed, direct-acting, spring-loaded, diaphragm-type control pilot. As the primary control pilot for the OCV Series 108 control valves, it is designed to maintain a constant preset inlet pressure on the main valve. It is a constant throttling device, maintaining precise, positive control of the main valve.

The 1330 may also be used by itself as a back pressure regulator.

The 1330 is available in bronze or stainless steel construction and with 3/8 NPT or 1/2 NPT end connections.

The 1330 is available with four different adjustment ranges:

5-30 psi	65-180 psi
20-80 psi	100-300 psi

FUNCTIONAL DESCRIPTION

The 1330 controls the pressure in the diaphragm cham-

ber of the main valve, hence the degree of opening or closing of the valve. The upstream pressure is sensed under the diaphragm of the pilot and is balanced against an adjustable spring load. As the upstream pressure increases above the set point, the pilot opens wider, decreasing the pressure in the diaphragm chamber of the main valve, opening the valve a proportionate amount. Conversely, as upstream pressure decreases below the set point, the pilot closes further, increasing the pressure in the diaphragm chamber of the main valve, closing the valve a proportionate amount. The net result is a constant modulating action of the pilot and main valve, keeping the upstream pressure at the set point within very close limits.

INSTALLATION AND ADJUSTMENT

The 1330 is normally installed in the main valve control piping between the ejector and the downstream body tap. Flow must be in the direction indicated. A sensing line, typically 1/4" O.D. tubing, must be installed between the pilot sense port and the upstream

control piping ahead of the ejector.

Pressure adjustment is made by means of the single adjusting screw:

Clockwise adjustment **increases** upstream pressure.

Counterclockwise adjustment **decreases** upstream pressure.

MAINTENANCE

Required maintenance of the 1330 is minimal. Fittings and bolts should be periodically checked, and the body should be inspected for damage or excessive buildup of foreign material.

TROUBLESHOOTING

Other than improper adjustment, there are basically only three malfunctions which can occur with the 1330 pilot. These, and the symptoms they can cause, are as follows:

1. **PILOT DIAPHRAGM RUPTURED:** Results in failure of the main valve to open. A ruptured pilot diaphragm will be evidenced by leakage through the vent hole in the pilot bonnet.
2. **PILOT SEAT DISC DETERIORATED:** Results in failure of the valve to seal off completely (pressure relief service). Can also cause poor pressure control.
3. **PILOT STEM BINDING:** Typically results in poor pressure control, though in extreme cases, it can result in failure of the main valve to open or close.

REPAIR PROCEDURES

Refer to the 1330 assembly drawing for parts identification.

A. DIAPHRAGM REPLACEMENT

1. Prior to disassembling the pilot, turn the adjusting screw (10) fully counterclockwise until it is loose enough to be turned with the fingers.
2. Remove the four bonnet cap screws (17).
3. Remove the bonnet (2). Set the spring (9) and spring retainers (11) aside in a safe place.
4. Pull the adapter (3) out of the pilot body (1).
5. Remove hex nut (16), lockwasher (22), upper diaphragm plate (8) and o'ring (20).
6. Remove old diaphragm (5).
7. Inspect both diaphragm plate o'rings (20). Replace if necessary.
8. Place new diaphragm on stem (7).
9. Replace upper diaphragm plate (8), o'ring (20), lockwasher (22) and hex nut (16). Tighten securely.
10. Insert adapter (2) back into pilot body (1).
11. Hold spring (9) and spring retainers (11) together in the proper orientation and insert them into the bonnet (2).
12. Place the bonnet over the adapter and insert the bonnet cap screws (17). Tighten securely.
13. Place valve back in service, following the startup and adjustment procedures given in the main portion of this manual.


B. SEAT DISC REPLACEMENT

1. Follow Steps 1 through 4 under DIAPHRAGM REPLACEMENT, above.
2. Remove cap screw (12), seal washer (13) and old seat disc (6).
3. Place new seat disc, new seal washer and cap screw (12) on stem. Tighten securely.
4. Reassemble pilot following Steps 10 through 13 under DIAPHRAGM REPLACEMENT, above.

C. STEM REPAIR

1. Follow Steps 1 and 2 under SEAT DISC REPLACEMENT, above.
2. Remove stem (7) from adapter (3).
3. Inspect stem and o'ring (21) carefully.
4. Remove any foreign material or light scratches from the stem with a fine grade of emery cloth. A badly scored stem should be replaced.
5. Replace o'ring (21).
6. Lubricate the o'ring and stem liberally with Vaseline® or similar lubricant.
7. Place stem in adapter (3). Make sure it moves freely.
8. Reassemble pilot following Steps 3 and 4 under SEAT DISC REPLACEMENT, above.

DESCRIPTION

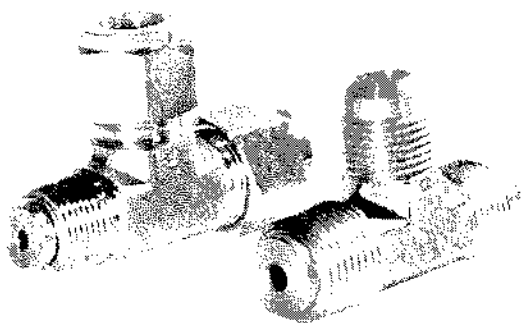

MODEL 126 EJECTOR

The Model 126 ejector is a simple tee fitting with a fixed orifice in its inlet port. It provides the proper supply pressure to the main valve diaphragm chamber, allowing various two-way control pilots to control the valve position.


MODEL 126 EJECTOR DIAGRAM

Brass Construction / Stainless
Steel Construction


MATERIAL	PART NUMBER	P (NPT)	T-TUBE O.D.	STD. ORIFICE	USED ON VALVE SIZES
Brass	213100	3/8"	3/8"	.125"	1 1/4"-6"
Brass	214100	1/2"	1/2"	.188"	8"-10"
Brass	215100	3/4"	3/4"	.188"	12"-16"
316 Stn. Steel	213700	1/4"	3/8"	.090"	1 1/4"-6"
316 Stn. Steel	214700	3/8"	1/2"	.125"	8"-10"
316 Stn. Steel	215700	1/2"	3/4"	.188"	12"-16"

Orifice bushings are stainless steel.

STAINLESS

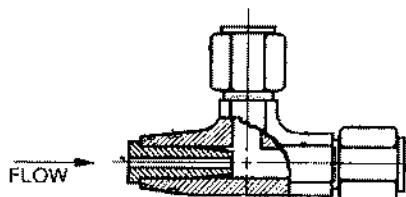

BRASS

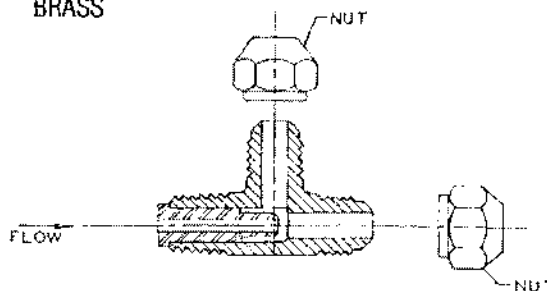



SCHEMATIC SYMBOL

The Model 126 Ejector is shown on OCV
Valve Schematics as:




EXAMPLE: Shown here on a MODEL 127-3 Pressure Reducing Valve

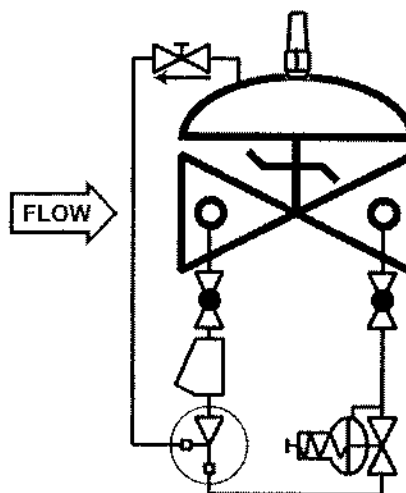

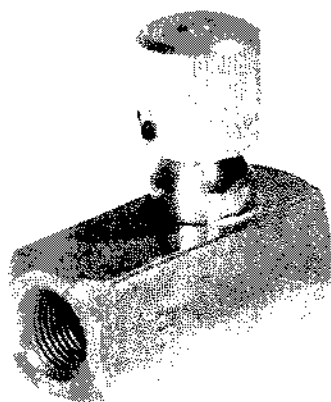
**DESCRIPTION**

The Model 141-3 Flow Control Valve is an adjustable restriction device, installed in the control circuit tubing. The flow control valve differs from a standard needle valve in that it includes an internal check valve. Thus it allows free flow in one direction (through the check) and restricted flow in the other direction (through the needle). The setting of the flow control valve meters the flow into or out of the main valve diaphragm chamber, thus controlling either the opening or closing speed of the main valve. These can be installed in series for separate opening and closing speed control. Restricted flow is in the direction of the flow arrow on the body.

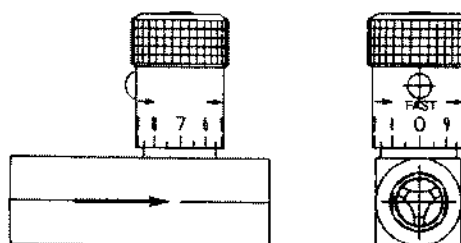**MODEL 141-3
MATRIX**

MATERIAL	PART NUMBER	INLET/OUTLET (NPT)	A	USED ON VALVE SIZE*
Brass	682100	1/4	2 3/8	1 1/4"-2"
Brass	682101	3/8	2 3/4	2 1/2"-6"
Brass	682102	1/2	3 1/4	8"-10"
Brass	682103	3/4	3 7/8	12"-16"
Stn. Steel	682700	1/4	2 3/8	1 1/4"-2" Stn.
Stn. Steel	682701	3/8	2 3/4	2 1/2"-6"
Stn. Steel	682702	1/2	3 1/4	8"-10"
Stn. Steel	682703	3/4	3 5/8	12"-16"


Note: Flow control valve use and size may vary on valve application. Consult factory.

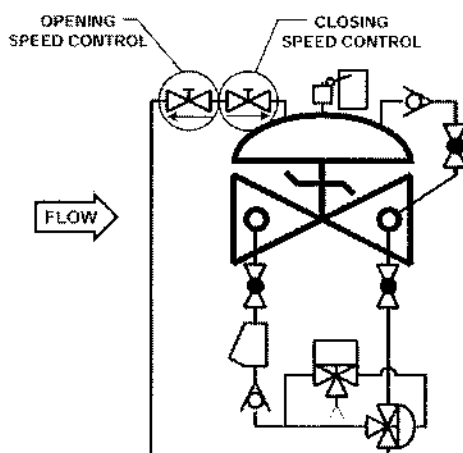**SCHEMATIC
SYMBOL**

The Model 141-3 Flow Control Valve is shown on OCV Valve Schematics as:



EXAMPLE: Shown here on a MODEL 125 Pump Control Valve as separate opening and closing speeds.

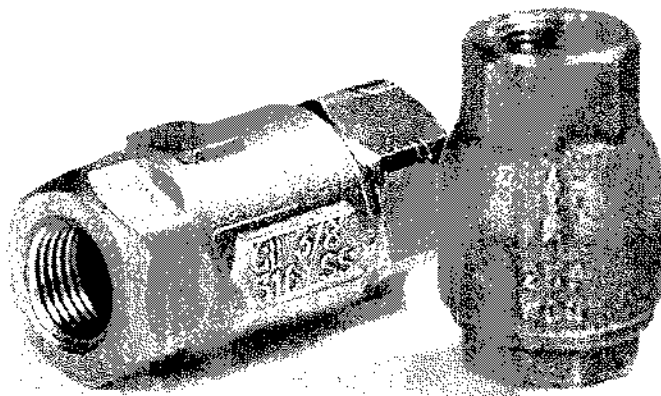

DESCRIPTION

The Model 141-1 Check Valve uses a spring-loaded poppet that will allow flow in one direction only. It is the primary component used on valves with a reverse flow check function. Flow is in the direction of the arrow on the check valve body.


◀ Check Valves shown
Stainless Steel & Brass

MODEL 141-1 MATRIX


MATERIAL	PART NUMBER	INLET/OUTLET (NPT)	LENGTH	USED ON VALVE SIZE
Bronze	681100	3/8	2	1 1/4"-6"
Bronze	681101	1/2	2 1/8	8"-10"
Bronze	681102	3/4	2 1/4	12"-16"
Stn. Steel	681700	3/8	2 5/16	1 1/4"-6"
Stn. Steel	681701	1/2	2 5/16	8"-10"
Stn. Steel	681702	3/4	2 7/8	12"-16"

SCHEMATIC SYMBOL

The Model 141-1 Check Valve is shown on OCV Valve Schematics as:

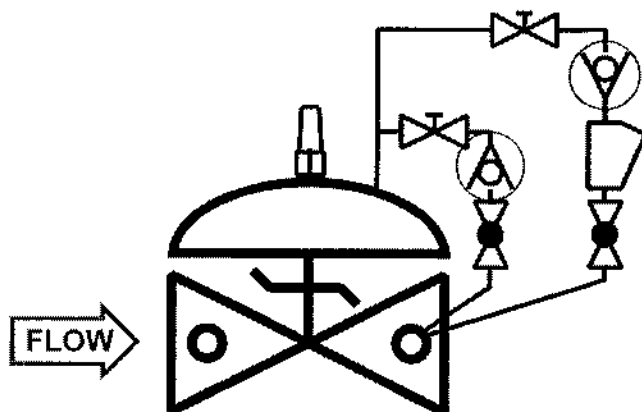

EXAMPLE: Shown here on a
MODEL 94-3 Check Valve.

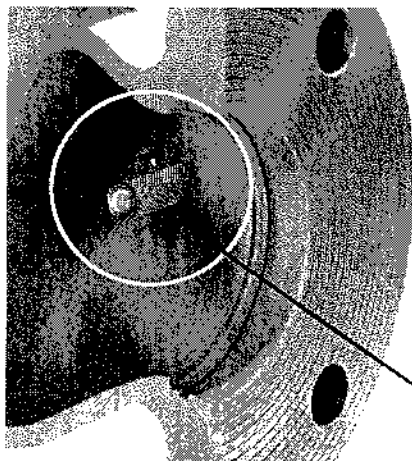

◀ Strainer Shown Installed

DESCRIPTION

The 123 Inline Strainer installs in the inlet side port of the main valve, and protects the pilot system from solid contaminants in the line fluid. The screen prevents the entrance of particles into the pilot system piping while flow through the main valve washes the screen clean. Recommended use on petroleum valve applications where flushing or removal of the screen for cleaning is not practical or may be considered hazardous.

DIMENSIONS


PART NUMBER	A	B	C	D	E	USED ON VALVE SIZE
660704	3/8	1/4	11/16	2 3/16	1 1/2	1 1/4"-6"
660705	1/2	3/8	7/8	2 1/4	1 1/2	8"-10"
660706	3/4	1/2	1 1/8	2 3/8	1 1/2	12"-16"

MATERIALS

Inline strainers are all-stainless steel construction.


SCREEN SIZE

Standard screen is 40 mesh. Other mesh sizes are available.

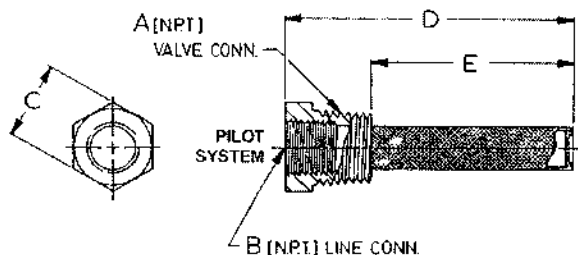

SCHEMATIC SYMBOL

The Model 123 Inline Strainer is shown on OCV Valve Schematics as:

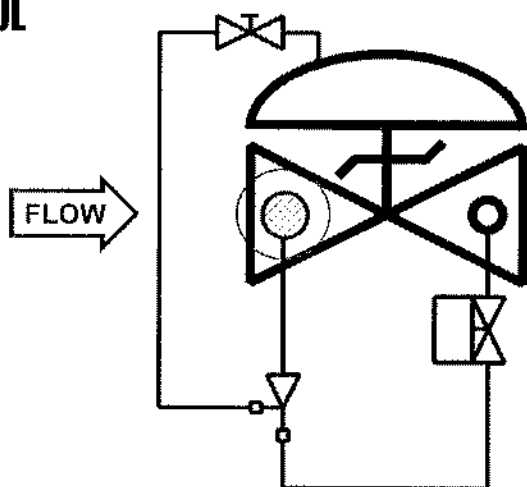

EXAMPLE: Shown here on a MODEL 115-2 Solenoid Valve.

DESCRIPTION

The Model 155L Visual Indicator is a device that enables the user to determine the extent of opening of a control valve. It consists of an adaptor threaded into the valve bonnet, a rod threaded into the main valve stem, a sealed Pyrex sight glass, and a protective aluminum housing. The indicator rod moves as the valve opens and closes. The 155L may be installed on virtually any OCV control valve, and can be done so without any disassembly of the valve itself. Since the assembly is not sealed from the diaphragm chamber of the main valve, it provides a convenient point for bleeding air via the 1/8" NPT port located at the top of the sight glass.

WHERE USED - The 155L is the standard visual indicator on fuel service valves. Optional on virtually any control valve not already employing a limit switch or position transmitter.

MODEL 155L MATRIX

MATERIAL	PART NO.	VALVE TRAVEL
1 1/4" - 1 1/2"	255500	3/8"
2"	255500	1/2"
2 1/2"	255500	3/4"
3"	255500	1"
4"	255501	1 3/8"
6"	255502	1 1/2"
8" - 10"	255503	2 1/2"
12"	255504	3"
14" - 16"	255505	3 1/2", 4"

MAX WORKING PRESSURE: 300 PSI

1" HEX ACROSS FLATS

S.S. PIPE PLUG
1/8 NPT 556707

ASSEMBLY NUMBERS

255500	1.25-3"
255501	4"
255502	6-8"
255503	10"
255504	12"
255505	14-16"

1.25-8" VALVES = 4 3/4"
10-16" VALVES = 6 15/16"

MONEL IND. STEM
(LENGTHS VARY WITH VALVE SIZE)

BUNA-N SEAL
693000


PYREX SIGHT GLASS
1.25-8" 316003
10-16" 316013

ALUM. HOUSING
1.25-8" 300504
10-16" 300506

BUNA-N SEAL
693000

S.S. ADAPTOR
300770

SCHEMATIC SYMBOL

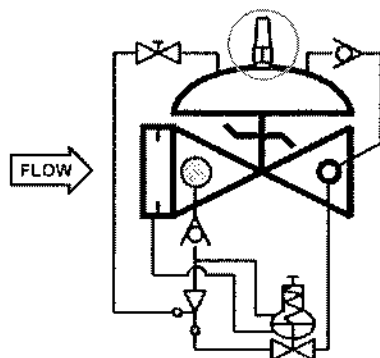

The Model 155L is shown on OCV Valve schematics as:



EXAMPLE: Shown here on a Model 120-6 Rate of Flow / Check Valve

MATERIALS

Indicator Rod:	Monel
Adapter:	Stainless Steel
Housing:	Aluminum
Sight Glass:	Pyrex
Sight Glass Seals:	Buna-N

TOLL FREE 1.888.628.8258 • phone: (918)627.1942 • fax: (918)622.8916 • 7400 East 42nd Place, Tulsa, OK 74145
email: sales@controlvalves.com • website: www.controlvalves.com

Global performance. Personal touch.

Valve Position Indicator (Liquid Filled) 155L

OCV[®] **FLUID**
SOLUTIONS^{LLC}



matholding group